



## Manual trigger sensor, miniDIN

CL026

### Function

Sends a trigger signal to the digital timer with scrolling data or the interface, must be used in conjunction with software and CidepeLab interfaces.

